


Central junction box and fuses

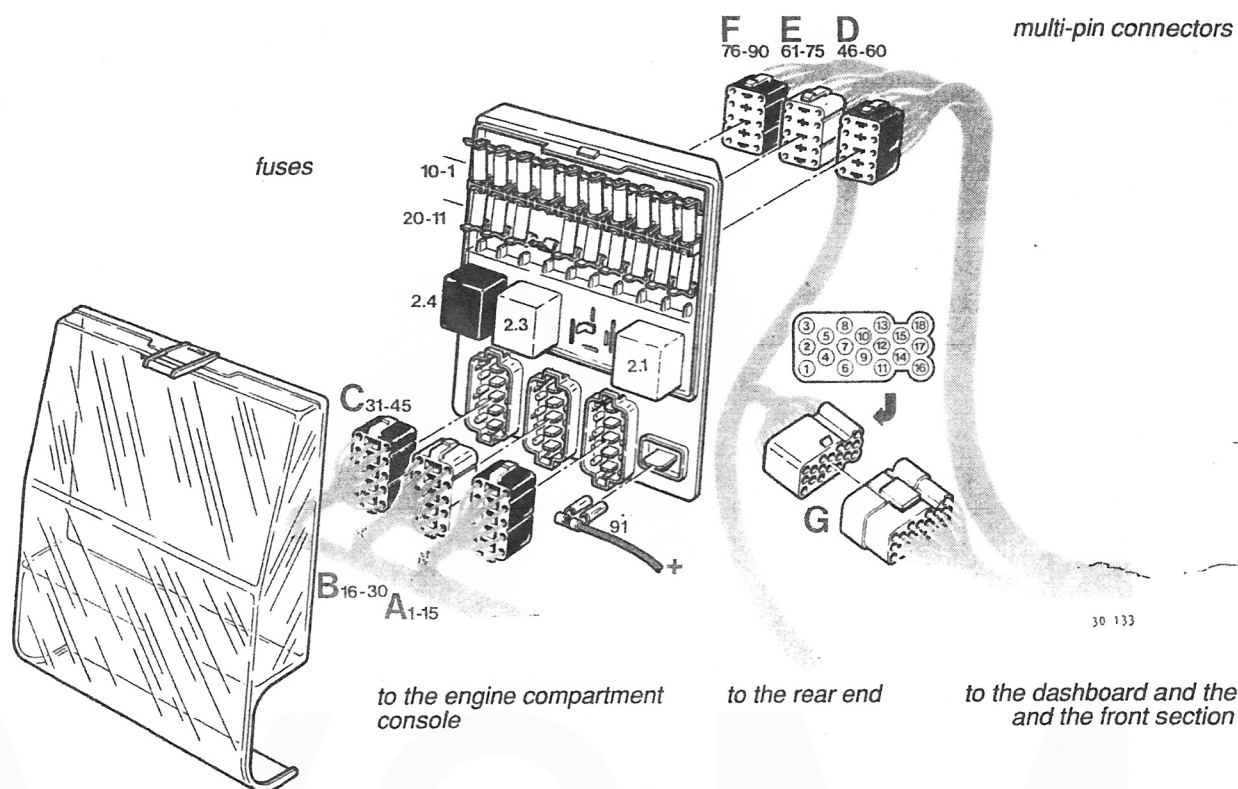

Components in the central junction box

Fuses

No.	Function	Rating (A)
1	RH headlight dipped beam, rear fog lamps (Switzerland*), fog light relay (German variant)	8
2	LH headlight dipped beam	8
3	LH headlight main beam and warning lamp	8
4	RH headlight main beam	8
5	LH parking light and warning lamp, dashboard and switch lighting, fog light relay GLE/GLT	8
6	RH parking light	8
7	Direction indicators	8
8	(AT vehicles) Declutching servo and vacuum control unit (tachometric relay)	8
9**	Gauges and warning lamps in the instrument panel, return sweep of headlight wiper motors (Nordic), shut-off valve (D16), electrically operated door windows and electric remote control door mirrors	8**

Component

2.1	Relay for headlight main beam/dipped beam
2.2	(not in use)
2.3	Start inhibitor relay, AT vehicles
2.4	X-contract relay (+75)

*On other variants there is a line fuse (8A) in the dashboard behind the glove box.

**On models with electrically operated door windows fuse No. 9 is 25A.